



INSTALLATION GUIDE | SINGLE FRAME – LARGE | 1200x2400 mm or larger

## Rockfon Canva® Wall panel


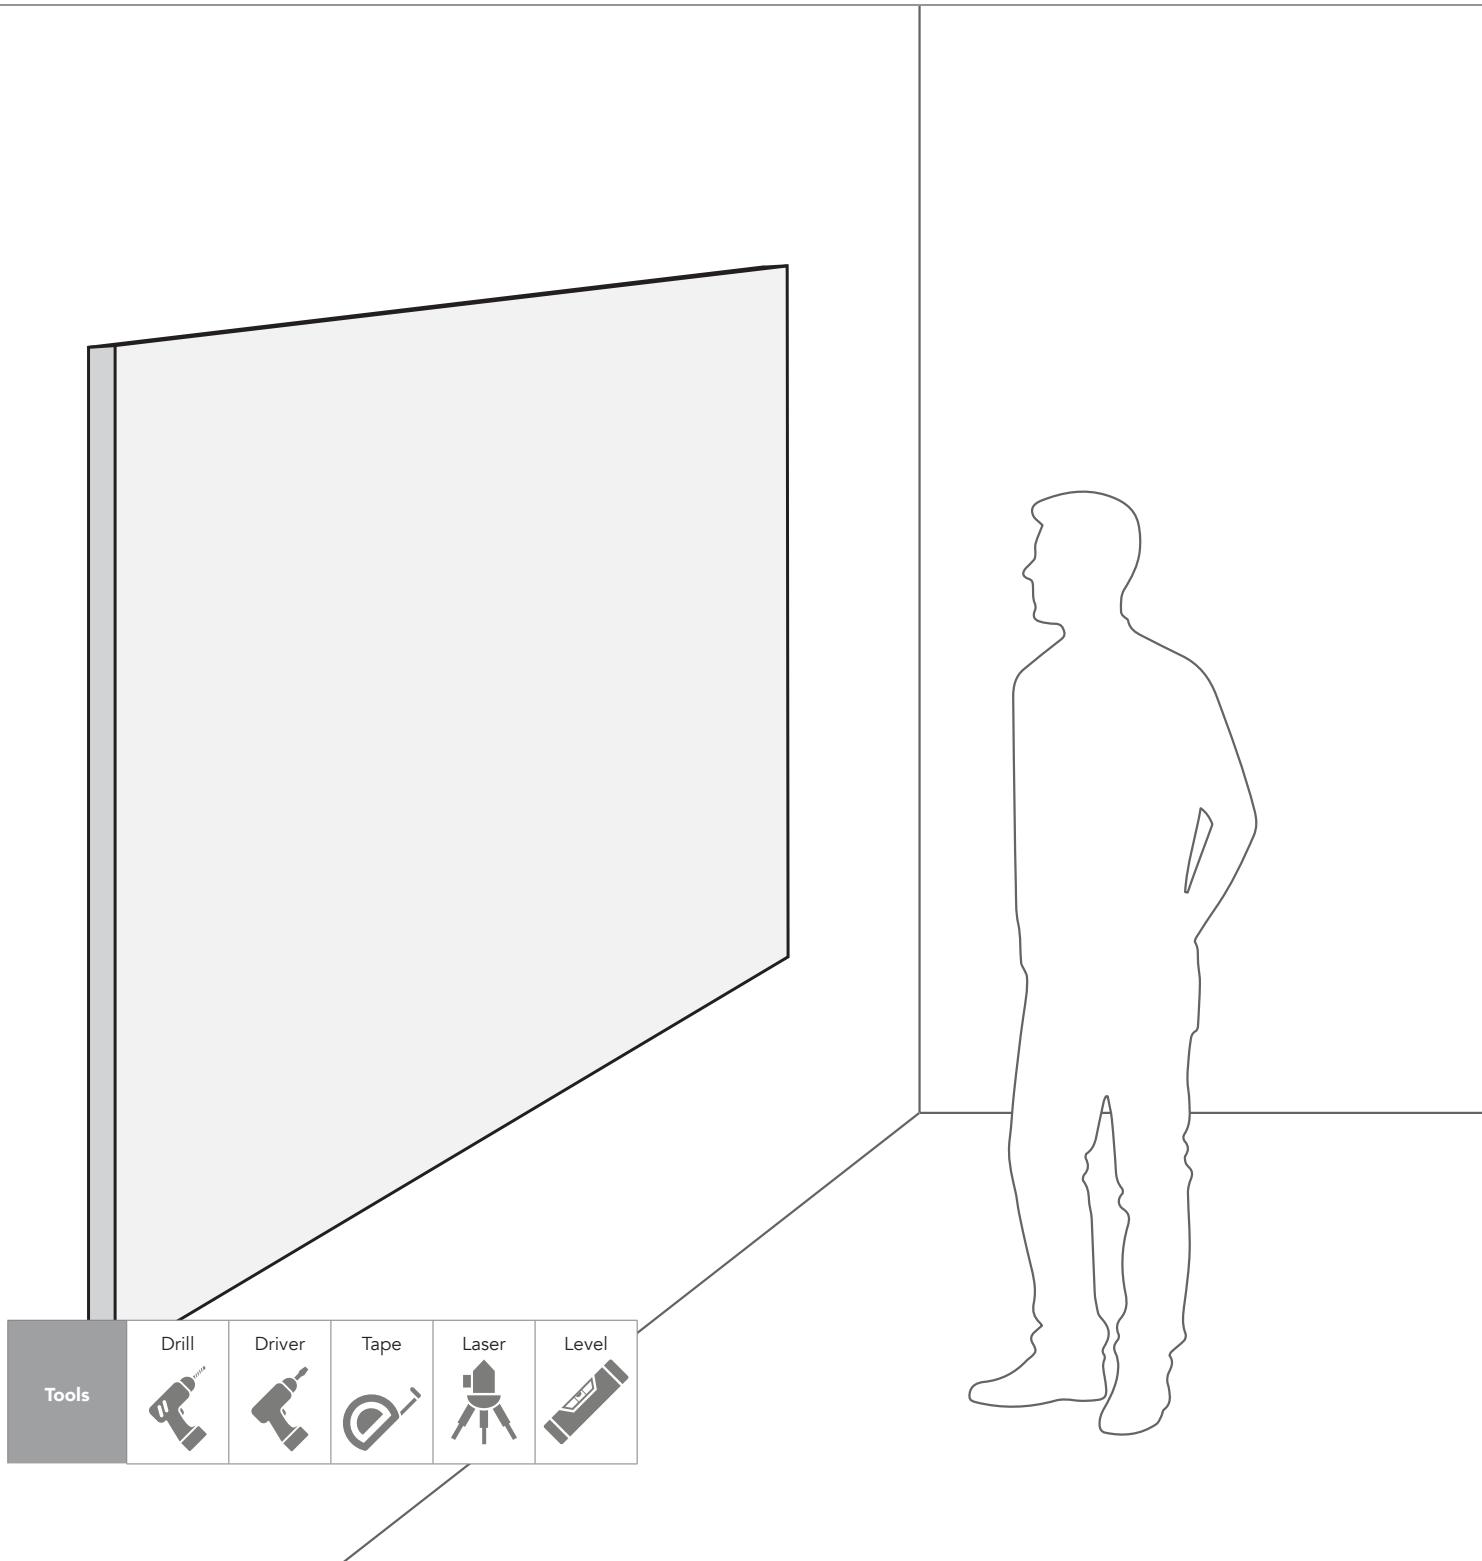


## Installation (4 steps in total)


- 1 Mount the wall brackets using screws.

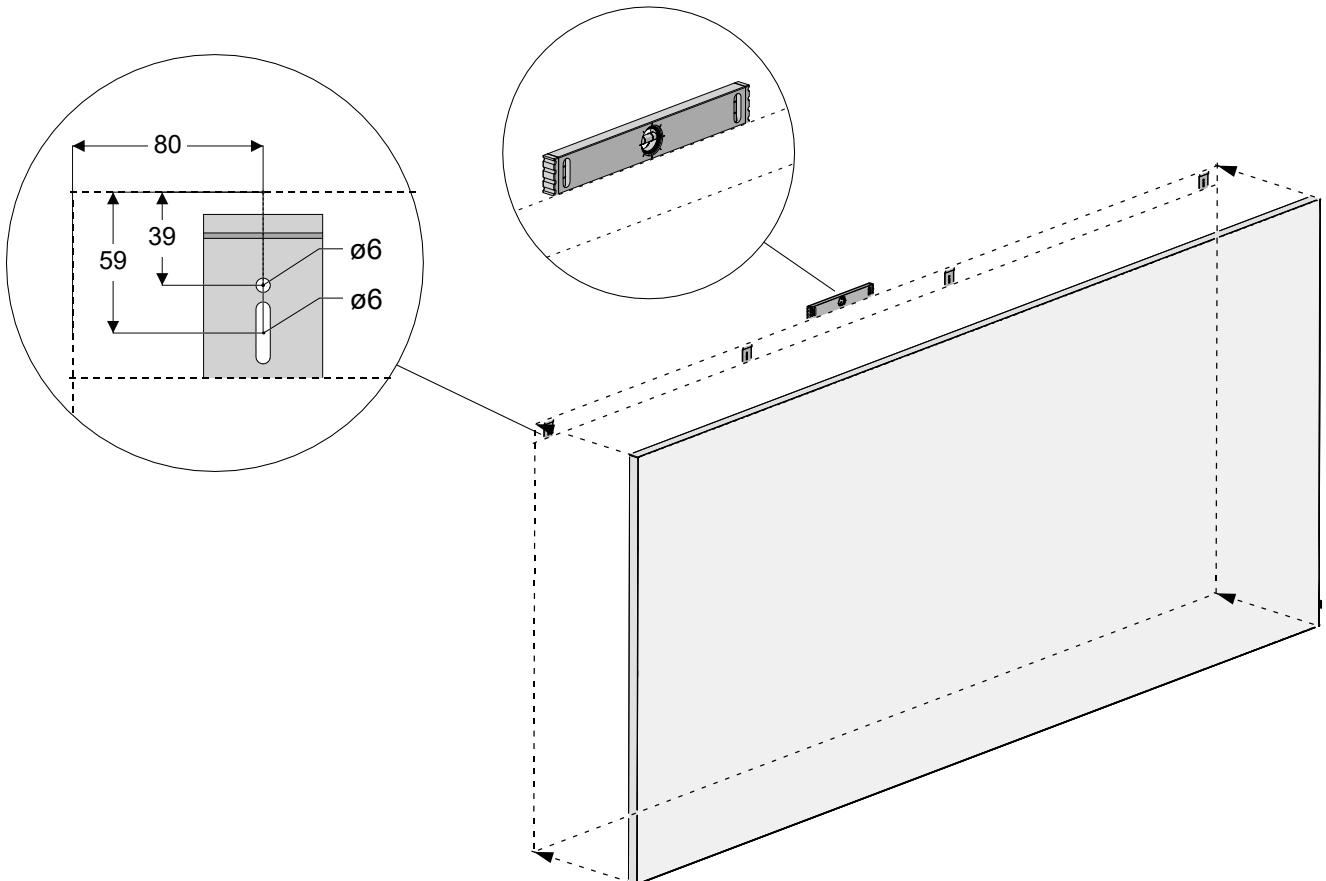


Wall brackets  
are not  
required when  
 $x < 600 \text{ mm}$

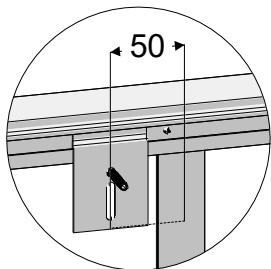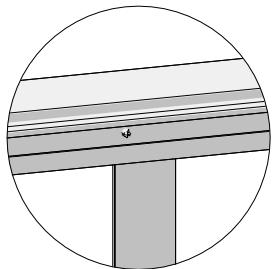

Wall brackets are  
mandatory next  
to an I-connector  
(vertical profile).

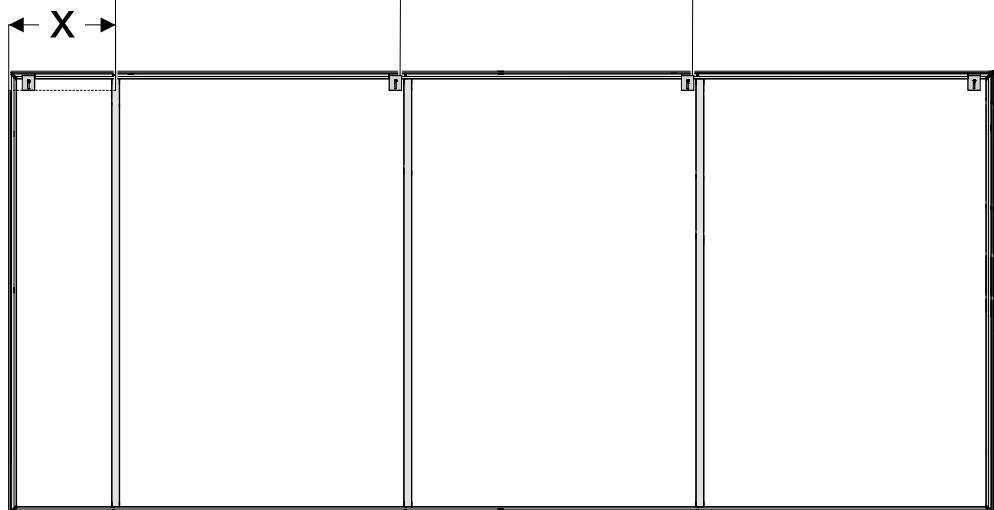


**2** Mount the wall panel on the wall brackets.

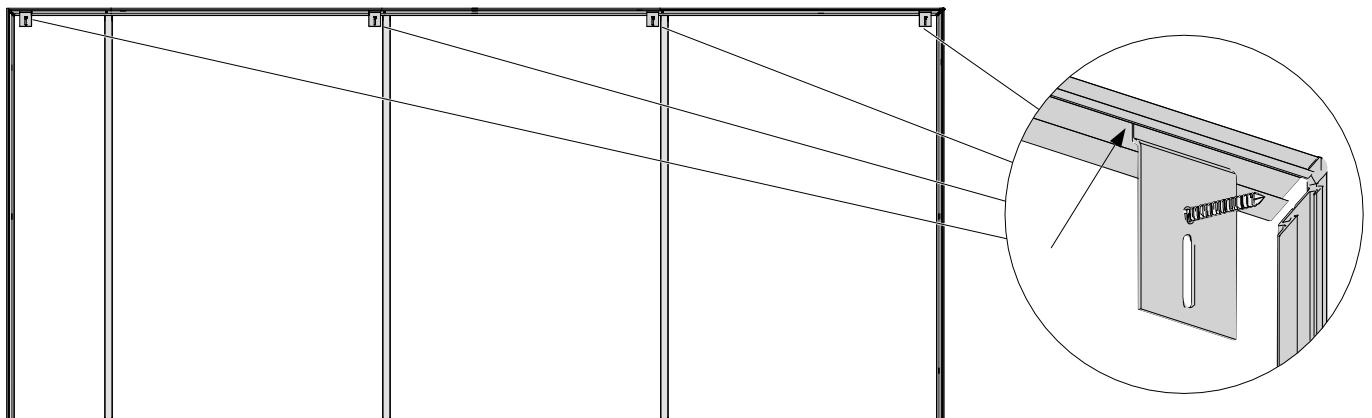

*Use the recess in the profile.*

**3** For secure installation, pull the tag to lift the canvas.

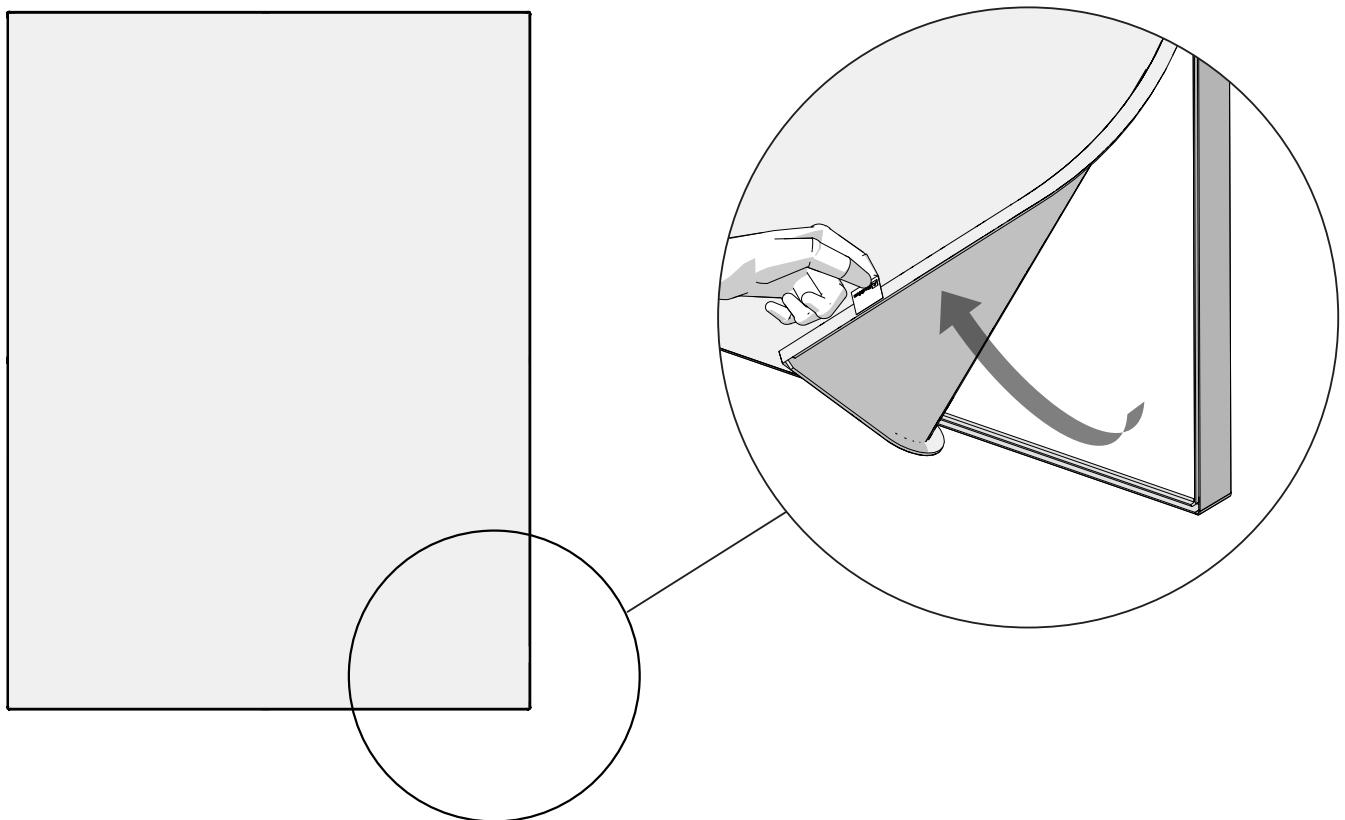

**4** Drill through the absorber and profile. Secure the panel to the wall using screws.

