



INSTALLATION GUIDE | OVERSIZE PANEL | 4000x2000 – 13000x3000 mm

Rockfon Canva® Wall panel

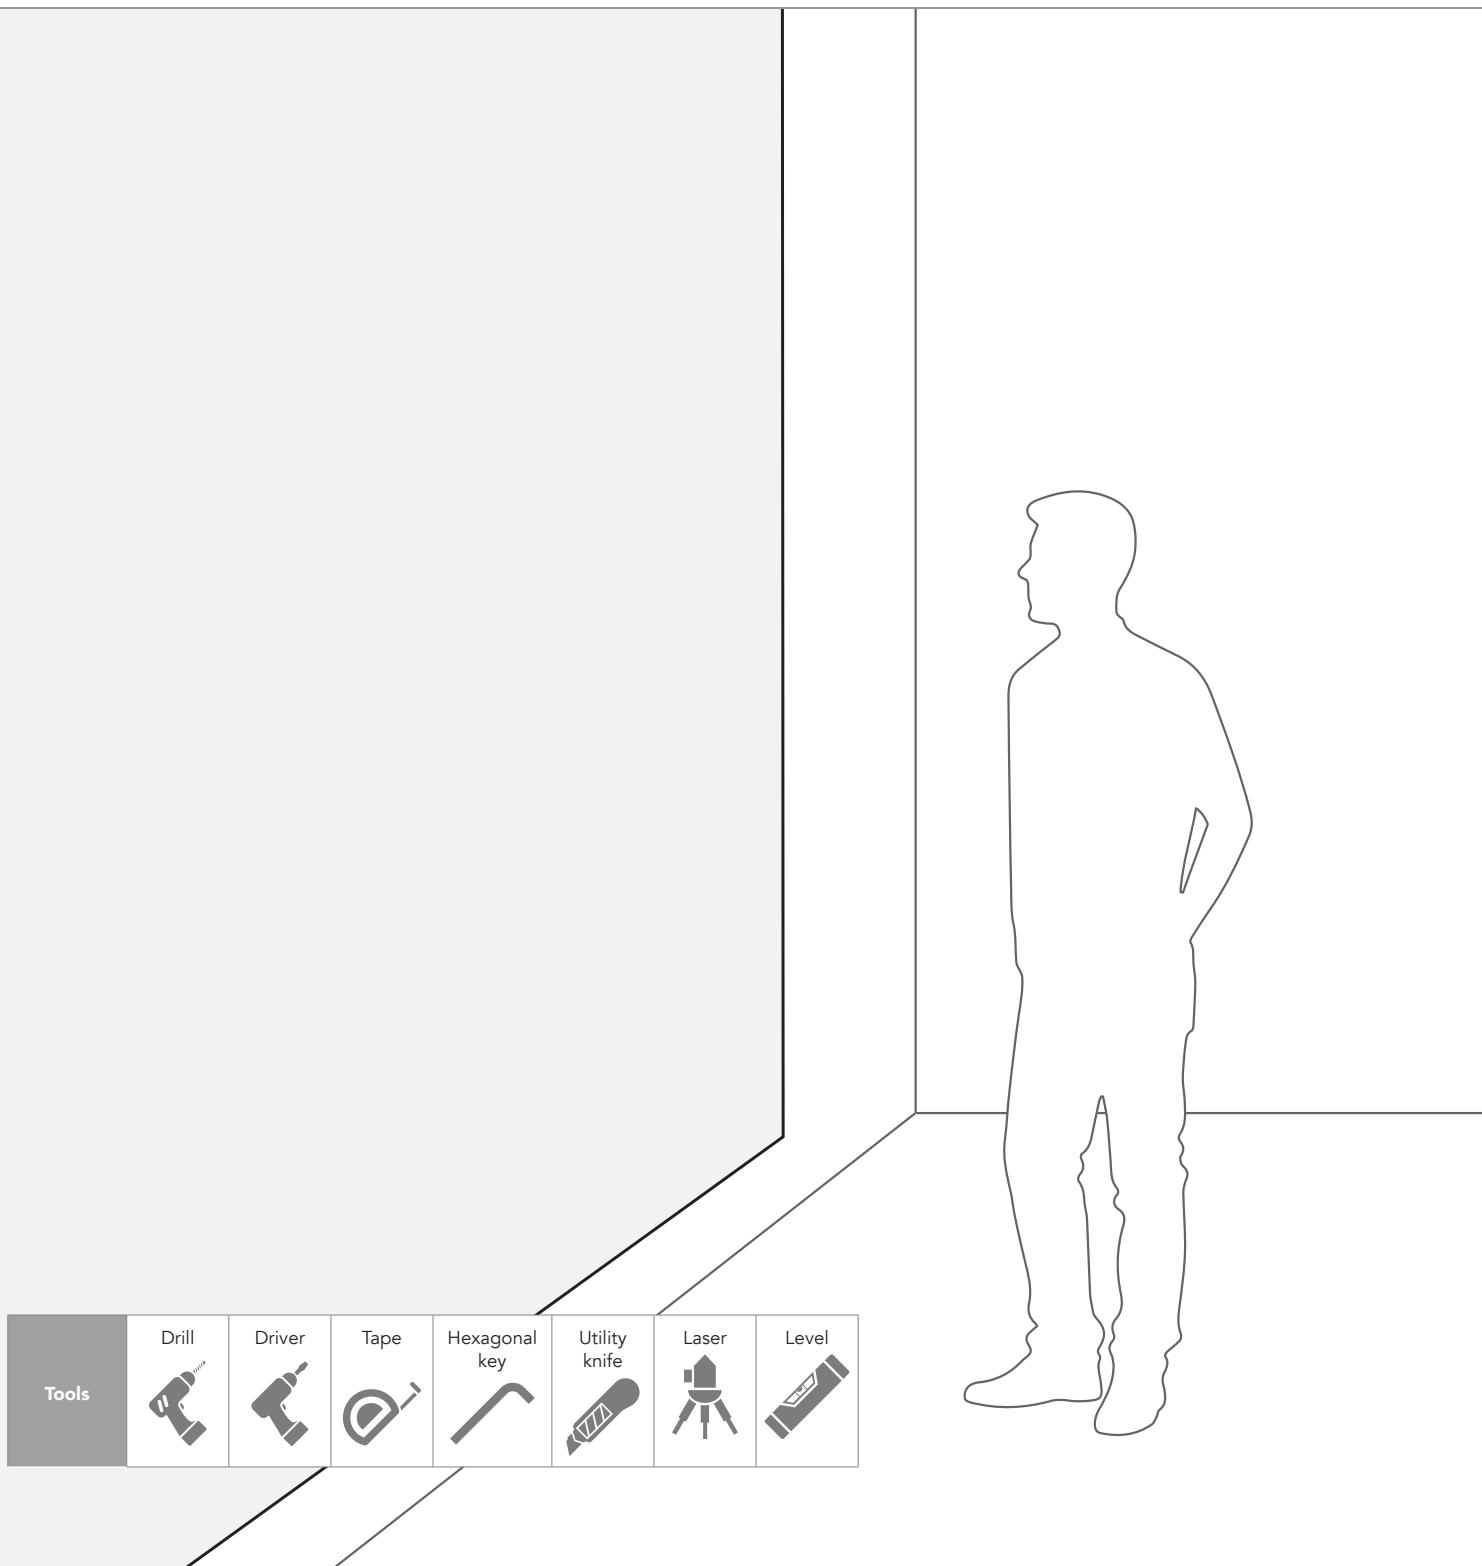



Installation (4 steps in total)

1 Drill screw holes in the profiles and secure them to the wall.
Use an hexagonal key to connect the frames and corners.

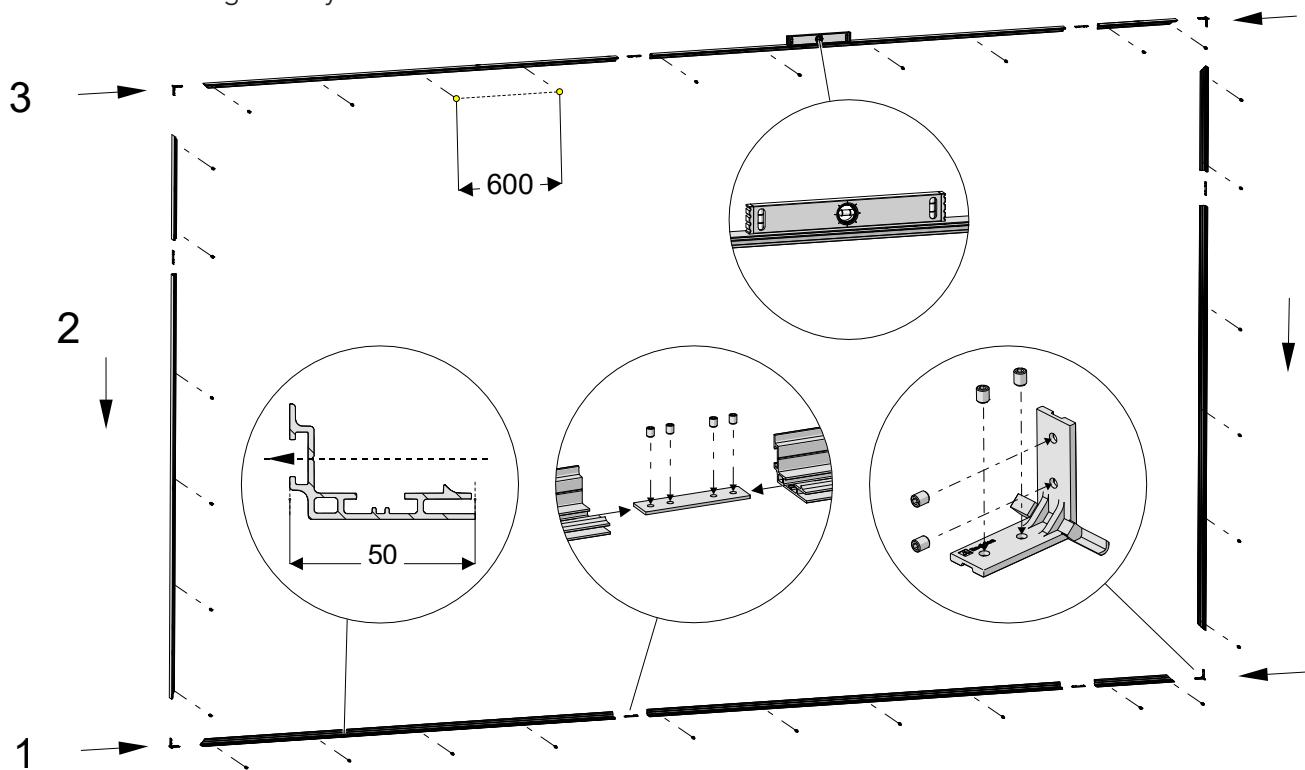

2 Insert the first absorber. Slide the connectors into the vertical side of the absorber, ensuring a 5 mm air gap between the back of the absorber and the wall, and fix them to the wall.

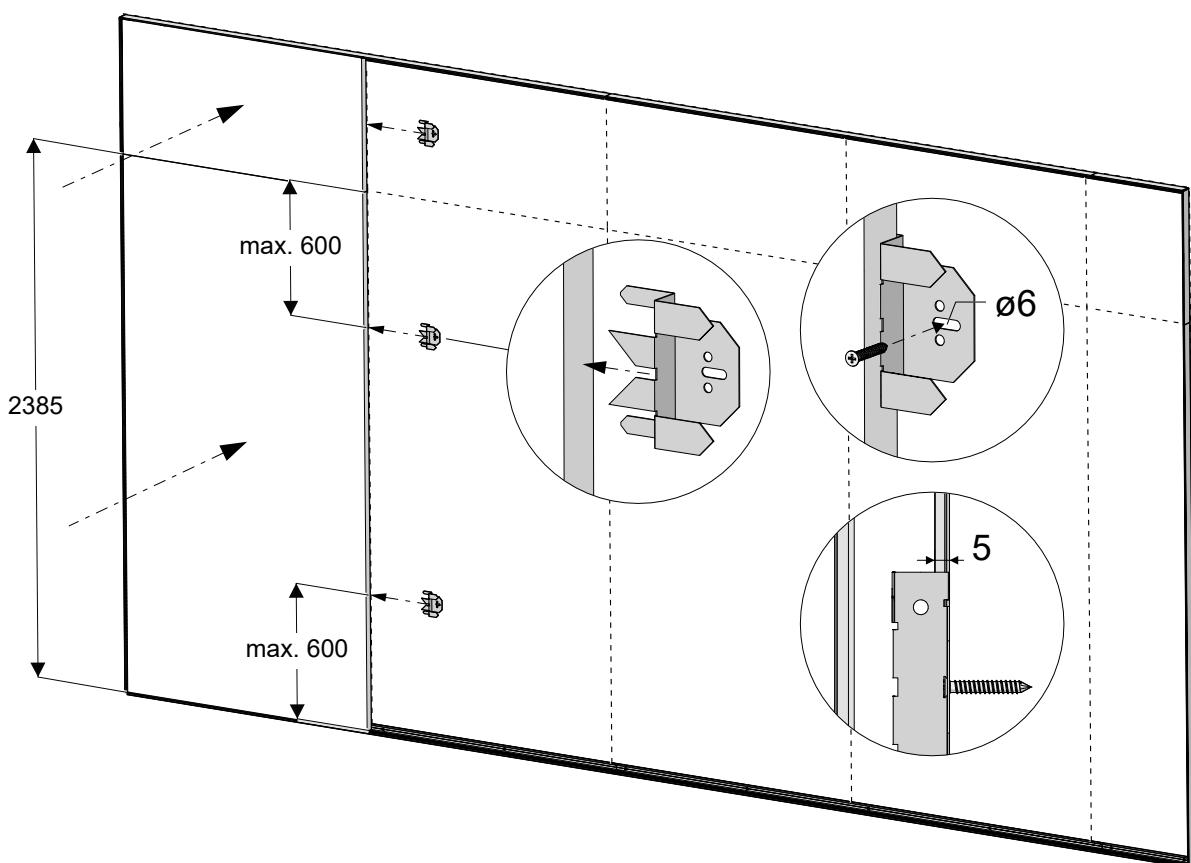

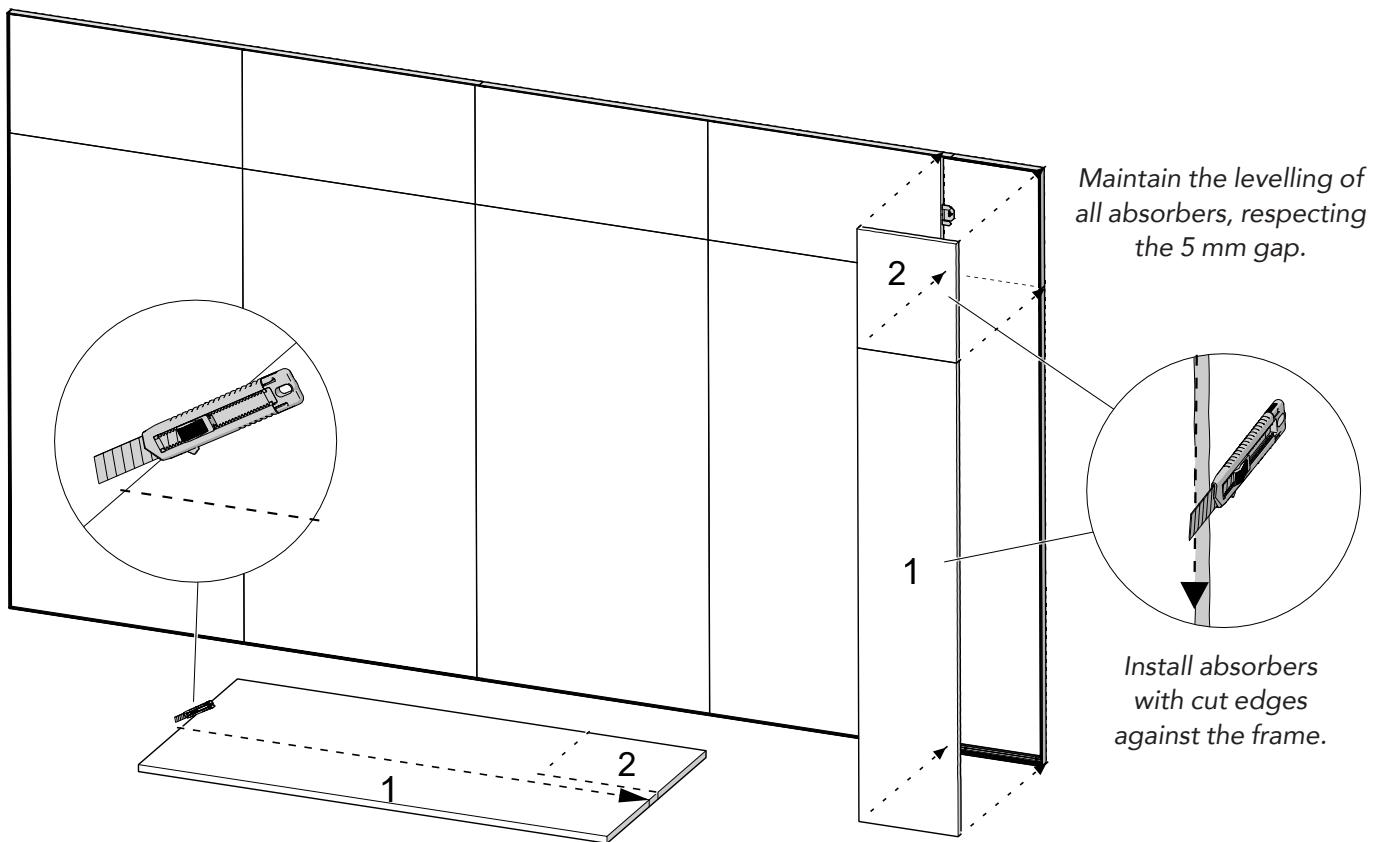

3 Place the absorbers firmly within the frame.

4 Attach the canvas.

