



INSTALLATION GUIDE | CUSTOM PUZZLE SOLUTION | 150x500 or 500x500 – 4000x2000 mm

Rockfon Canva® Wall panel

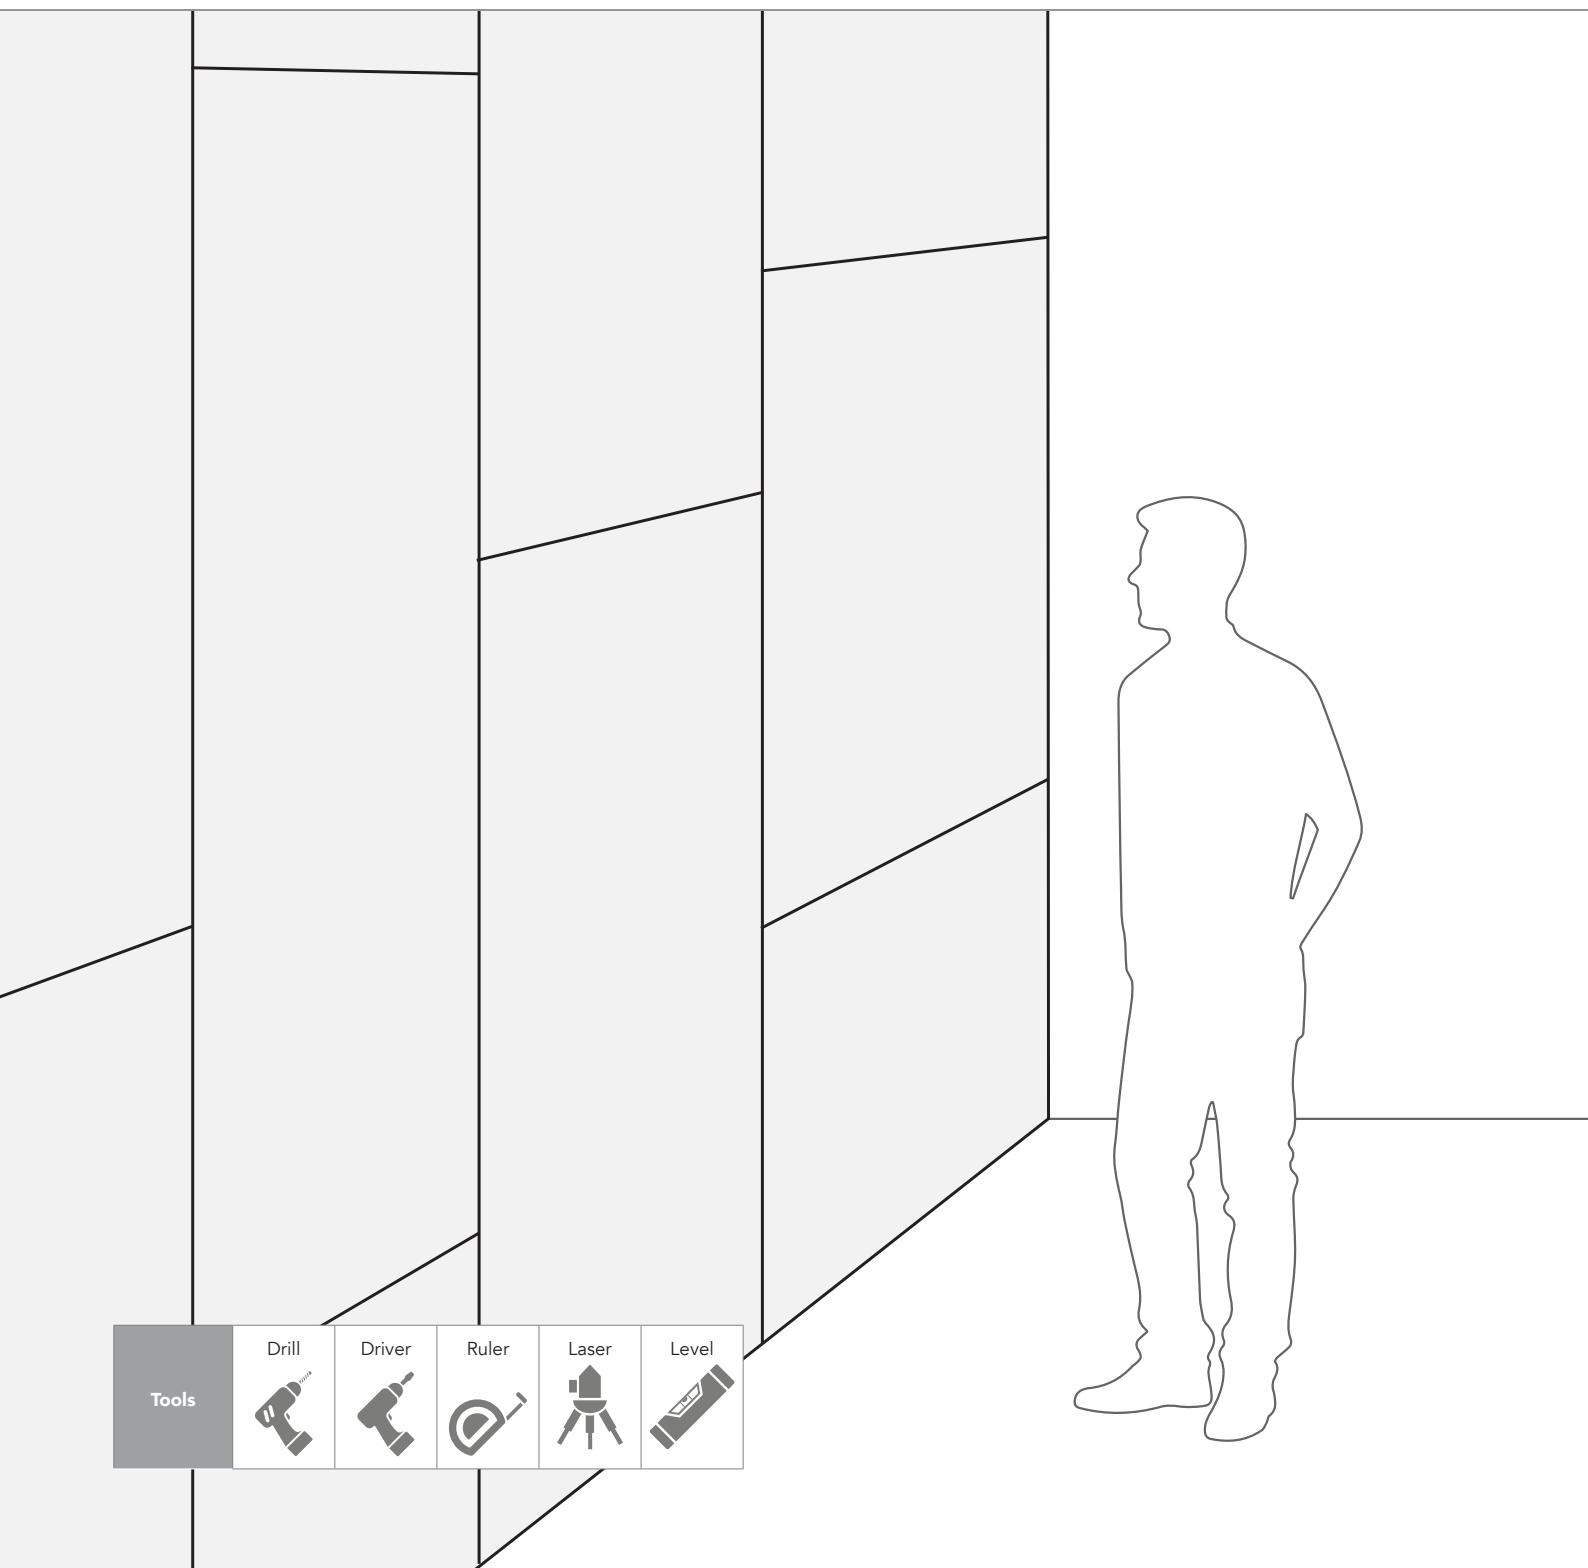


Installation (11 steps in total)



1 Remove the canvas and absorber.

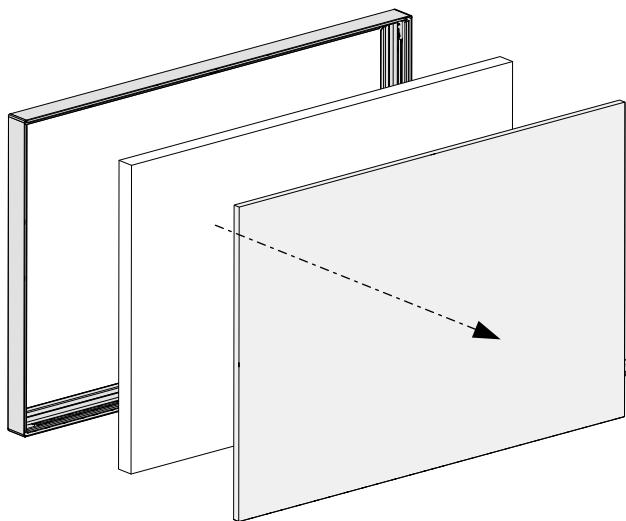


2 Drill screw holes in all profiles.

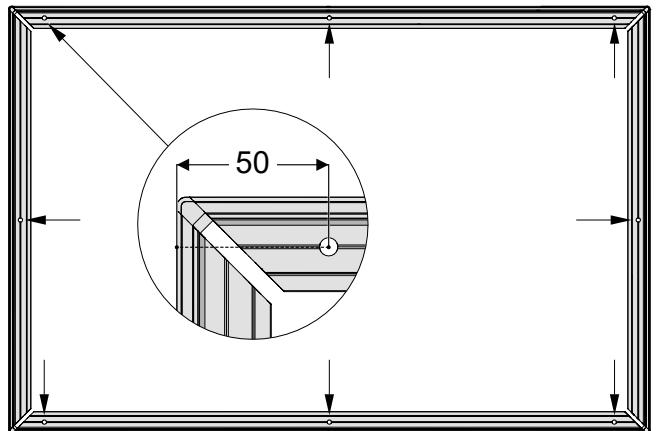


3 Mount the wall brackets using screws.

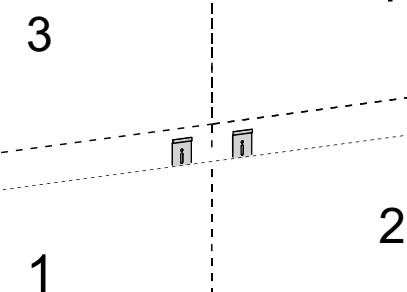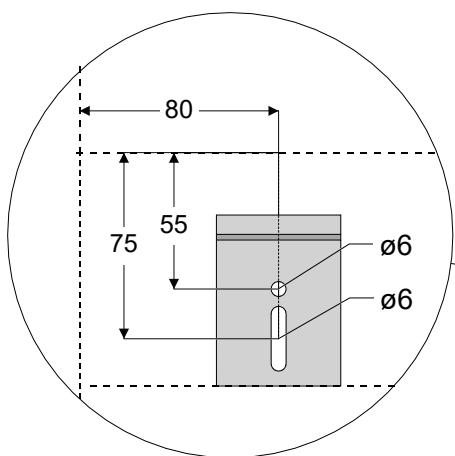


4 Mount the frames on the wall brackets.

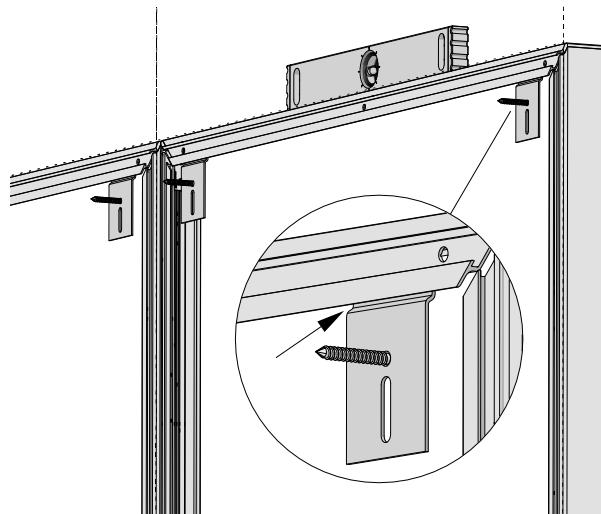


5 Secure the bottom frames to the wall using screws.

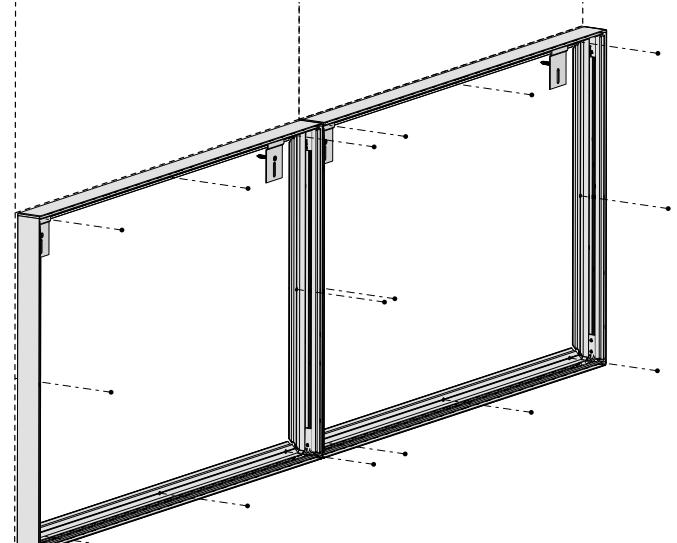


6 Fasten the frames together vertically with self drilling screws to prevent gaps.

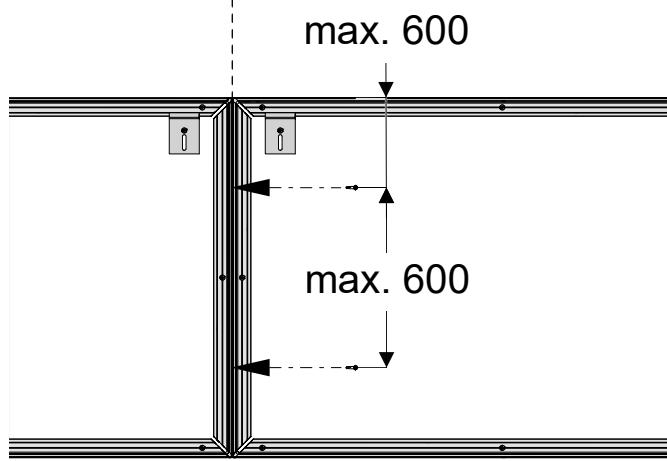

7 Secure the upper frames to the wall using screws.

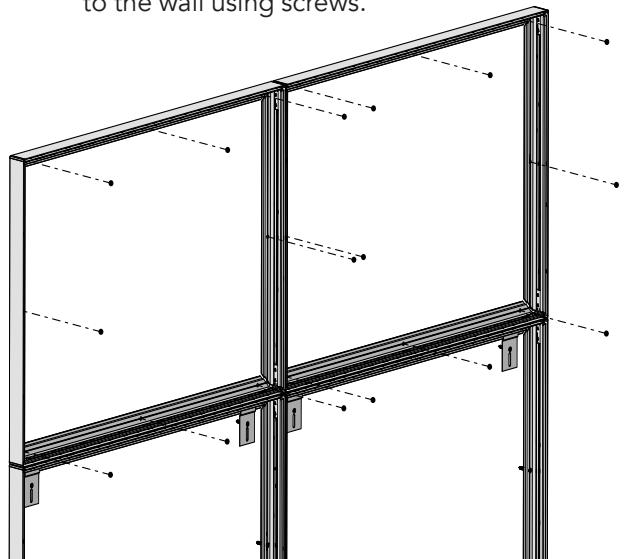


8 Fasten the frames together (horizontally & vertically) with self drilling screws to prevent gaps.

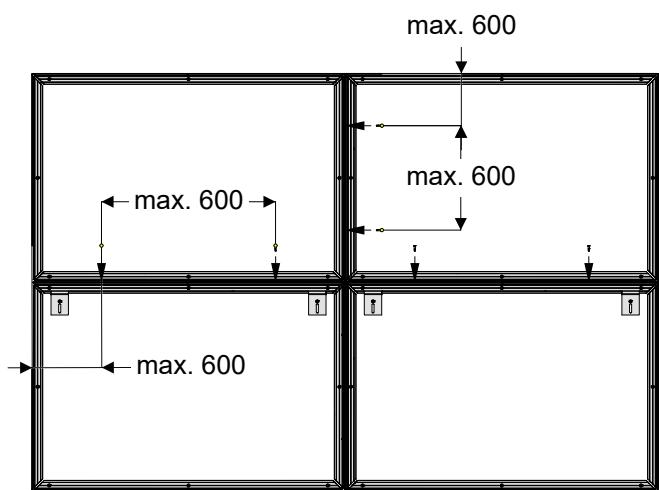

9 Insert the absorbers.



10 Place the absorbers firmly within the frame.

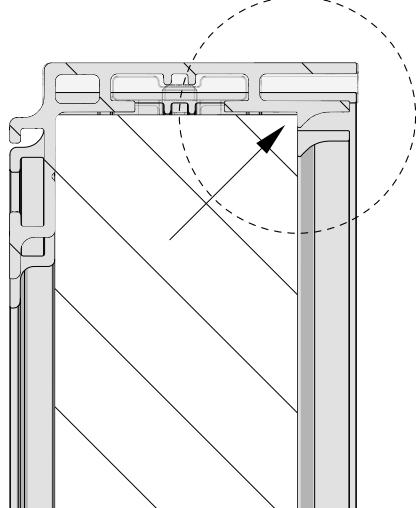

11 Attach the canvases.

